

TOTAL360

COVERED COMPONENTS

COVERED COMPONENTS	TIER 1	TIER 2	TIER 3
Engine	✓	✓	✓
Transmission	✓	✓	✓
Differential	✓	✓	✓
Turbo		✓	✓
Aftertreatment		✓	✓
Engine Accessory		✓	✓
Electrical		✓	✓
Cabin Comfort		✓	✓
Steering		✓	✓
Suspension		✓	✓
Brakes		✓	✓
APU (add-on)		✓	✓
Hydraulics (add-on)		✓	✓

QUALIFICATIONS

We offer coverage on all class 3-8 trucks. The one qualification we require is that truck age must be 15 years or newer.

Ask us about our SUPERANNUATED program for trucks 16-30 years old.



COVERAGE BEYOND EXTRAORDINARY

(888) 806-9360
www.total360.com

TIER 1

TIER 2 (INCLUDES TIER 1 COVERAGE)

Internally Lubricated Parts Including:

- Connecting Rods
- Connecting Rod & Main Bearings
- Constant Velocity Valve
- Crankshaft
- Cylinder Liners*
- Engine Block*
- Main Thrust Washers
- Pistons
- Piston Rings
- Timing Chain & Gears
- Timing Chain Tensioners
- Timing Gear Cover
- Wrist Pins

LUBRICATING SYSTEM

- Oil Pan
- Oil Cooler & Housing
- Oil Pump Housing & Gears
- Oil Pump Pick Up Screen & Tube
- Oil Pump Pressure Relief Springs & Valves
- Piston Oil Cooling Jets

**THE ENGINE BLOCK, CYLINDER LINERS, & CYLINDER HEADS ARE COVERED ONLY IF DAMAGED BY A COVERED COMPONENT.*

OVERHEAD COMPONENTS

- Cam Followers
- Camshaft
- Camshaft Bearings
- Cylinder Head*
- Hydraulic Lifters
- Intake/Exhaust Valves
- Intake/Exhaust Valve Guides
- Pushrods
- Rocker Arms
- Rocker Arm Shafts
- Valve Keepers (locks)
- Valve Retainers
- Valve Springs
- Valve Cover

RELATED ITEMS

- Exhaust Manifold
- Flywheel Housing
- Intake Manifold
- Vibration Dampener

Internally lubricated Parts of the Manual or Automatic Transmission Including:

- Bands
- Bearings
- Blockers
- Bushings
- Drums
- Gear Sets
- Governor
- Input Shaft
- Oil Pump
- Shaft(s)
- Shift Forks
- Synchronizers
- Thrust Washers
- Torque Converter
- Transmission Case*
- Valve Body

Internally Lubricated Parts Including:

- Axle Shafts
- Bearings
- Bushings
- Carrier Case
- Gear Sets
- Limited Slip Clutch Pack
- Power Divider Bearings
- Gears
- Shafts
- Shift Fork
- Differential Housing*

**THE DIFFERENTIAL HOUSING IS COVERED ONLY IF DAMAGED BY A COVERED COMPONENT*

ENGINE

Internally lubricated parts including:

- Balance & Timing Belt Tensioners

OVERHEAD COMPONENTS

- Variable Valve Camshaft Adjuster

FAN/FAN DRIVE ASSEMBLIES

- Belt Tighteners
- Fan Blades & Shroud
- Fan Clutch
- Fan Group
- Harmonic Balancer

TRANSMISSION

Internally lubricated parts of the Manual or Automatic transmission including:

- XY Shifter
- Clutch*

CLUTCH COVERED IF FAILED; PARTS ONLY AND NO PROGRESSIVE DAMAGE

DIFFERENTIAL(S)

- Thrust Washer(s)

Internally Lubricated Parts Including:

ENGINE ACCESSORY

- COOLING SYSTEM**
- Alternator
 - Charge Air Cooler
 - Engine Thermostat
 - Engine Thermostat Housing
- FUEL PUMPS**
- Fuel Injection Pump
 - Fuel Lift Pump
 - Fuel Prime Pump
 - Fuel Transfer Pump
 - High/Low-Pressure Fuel Pump

FUEL INJECTORS

- Failed Injectors
- Failed injector Cups
- Fuel injector Hard Lines
- Fuel Intake Manifold
- *Fuel Injector Tubes & Seals

STARTER

- Armature
- Bearings
- Boot
- Brushes
- Brush Holder
- Bushings
- Coil
- Commutator
- Drive Assembly
- Insulator
- Jumper
- Magnet
- Motor Shaft Lever & Spring
- Plunger
- Solenoid
- Starter Drive Gear

TURBOCHARGER(S)

- Actuator
- Bearings
- Internal Variable Vane Assembly
- Turbines
- Turbine Shaft
- Turbocharger Housing
- VPOD
- Wastegate

WATER PUMP**

- Bearings
- Housing
- Impeller
- Seals
- Water Manifold

*NO PROGRESSIVE DAMAGE***

AFTERTREATMENT

DIESEL EXHAUST FLUID SYSTEM

- (DEF) Heated Lines
- (DEF) Heater Control Relay
- (DEF) Heater Coolant Control Valve
- (DEF) Heating Elements
- (DEF) Heating Fittings
- (DEF) Injection Nozzle
- (DEF) Module
- (DEF) Pump
- (DEF) Tank

HYDROCARBON DOSER SYSTEM

- Diesel Oxidation Catalyst (DOC)
- Hydrocarbon Doser Injector (HC Doser, 7th Injector, ARD, AHI Module)
- Hydrocarbon Doser Valve - Air/Fuel/Coolant Lines & Inline Air Filter
- Hydrocarbon Doser Valve (Voss Valve)

EXHAUST GAS RECIRCULATION (EGR)**

- BPV Actuator
- BPV (Back Pressure Control Valve)
- EGR Actuator
- EGR Connecting Bellows & Clamps
- EGR Cooler(s)
- EGR Cooler Lines
- Exhaust Piping/ Clamps/ Gaskets
- Exhaust Throttle Valve
- EGR Valves

*NO PROGRESSIVE DAMAGE***

DIESEL PARTICULATE

- Diesel Particulate Filter (DPF)
- DPF Air/ Fuel/ Coolant Lines
- DPF Air/ Fuel/ Manifold Assembly
- DPF Dosing Module

SELECTIVE CATALYTIC REDUCTION

- Selective Catalytic Reduction (SCR) Catalyst
- Selective Catalytic Reduction (SCR) Decomp Pipe/Elbows

ELECTRICAL


- After Treatment Control Module (ACM)
- Electronic Control Module (ECM) - Includes the ECM Unit

SENSORS- AFTERTREATMENT

- Aftertreatment Regeneration Flame Detection Temperature Sensor
- ASM Sensor
- Back Pressure Valve Temperature Sensor
- Back Pressure Valve Pressure Sensor
- Burner Flame Temperature Sensor
- Catalytic Converter (downstream) NOX Sensor
- Catalytic Converter (upstream) NOX Sensor
- Catalytic Converter Temperature Sensor
- Catalytic Reduction Actuator (downstream) Temperature Sensor
- Catalytic Reduction Actuator (upstream) Temperature Sensor
- Catalytic Reduction Actuator Temperature/Fill level Sensor
- Catalytic Reduction Actuator Temperature/Moisture Sensor
- Clean Gas Induction (CGI) Cooler Combustion Air Delta Sensor
- Clean Gas Induction (CGI) Cooler Pressure Sensor
- Clean Gas Induction (CGI) Cooler Temperature Sensor

- Compensation Sensor
- Delta P Sensor
- Diesel Exhaust Fluid (DEF) Tank Fill Level Sensor
- Diesel Exhaust Fluid (DEF) Temperature Sensor
- Diesel Exhaust Fluid (DEF) Quality Sensor
- Diesel Exhaust System Nitrogen Oxide (NOx) Sensor
- Diesel Oxidation Catalyst (DOC) Gas Temperature Sensor
- Diesel Oxidation Catalyst (DOC) Pressure Sensor
- Diesel Particulate Filter Ammonia Sensor
- Doser Valve Pressure Sensor
- Exhaust Aftertreatment Fuel Control Module Sensor
- Exhaust Aftertreatment Particulate Trap Differential Pressure Sensor
- Exhaust Aftertreatment Pressure Sensor
- Exhaust Back Pressure Sensor
- Exhaust Gas Recirculation (EGR) Monitor Sensor
- Exhaust Gas Recirculation (EGR) Position Sensor
- Exhaust Gas Recirculation (EGR) Pressure Sensor

- Exhaust Gas Temperature Sensor
- Exhaust Oxygen (O2/Lambda) Sensor
- Exhaust Temperature Sensor
- Exhaust Soot Sensor
- Input Exhaust Gas Sensor
- Metering Device Compressed Air Pressure Sensor
- Metering Device Pressure Sensor
- Metering Device Temperature Sensor
- Nitrogen Oxide (NOx) Sensor(s)
- Output Exhaust Gas Pressure Sensor
- Particulate Soot/Matter Sensor (PM Sensor)
- Selective Catalytic Reduction Air Intake Humidity Sensor
- Selective Catalytic Reduction System Inlet/Outlet
- Selective Catalytic Reduction Temperature Sensor
- Upstream DPF Temperature Sensor

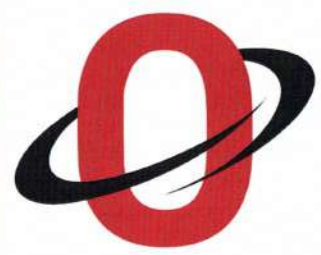

<p>ENGINE</p> <p>Internally Lubricated Parts including:</p> <ul style="list-style-type: none"> • Head Bolts* • Valve Seats* • Valve Stem Seals* <p><i>COVERED ONLY IF DAMAGED BY A COVERED COMPONENT*</i></p> <p>RELATED ITEMS</p> <ul style="list-style-type: none"> • Cylinder Heads** • Cylinder Liners** • Engine Block** • Engine Mounts** • Flywheel Housing Gasket • Front Crank Seal • Front Housing Gasket • Head Gasket** • Intake Manifold Gasket • Rear Main Seal <p><i>NO PROGRESSIVE DAMAGE**</i></p>
--

<p>TRANSMISSION</p> <p>Internally lubricated parts:</p> <ul style="list-style-type: none"> • Encoder Motor** • Power Take-Off** • Transmission Oil Cooler** • Vacuum Modulator** • Viscous Coupling** <p><i>NO PROGRESSIVE DAMAGE**</i></p>

<p>DIFFERENTIAL(S)</p> <p>Internally lubricated parts including:</p> <p>DRIVE SHAFT</p> <ul style="list-style-type: none"> • Driveshaft** • Driveshaft Center Support Bearing** • Driveshaft Yokes** • Flex Disc(s)** <p><i>NO PROGRESSIVE DAMAGE**</i></p> <p>ENGINE ACCESSORY</p> <ul style="list-style-type: none"> • Engine Air Compressor <p>FUEL INJECTORS</p> <ul style="list-style-type: none"> • Fuel Governor • Fuel Pressure Regulator • Fuel Sender Assembly • Fuel Tank <p>COOLING SYSTEM</p> <ul style="list-style-type: none"> • Coolant Recovery Tank • Coolant Surge Tank • Radiator Brackets**

<p>CABIN COMFORT</p> <ul style="list-style-type: none"> • AC Pressure Switches • Accumulator • Condenser & Condenser Fan Motor • Expansion Valve • Evaporator • HVAC Heater core • HVAC Temperature Control Head • Idler Pulley & Bearings • Orifice Tube • Serpentine Belt Tensioner • Temperature Control Valve <p>HVAC AIR COMPRESSOR</p> <ul style="list-style-type: none"> • Air Compressor Mounting Bracket*** • Compressor Clutch & Pulley <p>HVAC BLOWER MOTOR</p> <ul style="list-style-type: none"> • Blower Motor Fan, • Blower Motor Resistor • Plenum Blower Case <p>CABIN HVAC</p> <ul style="list-style-type: none"> • Control Cables • Defrost Assembly • Receiver Drier • Refrigerant In conjunction with a covered repair • Ductwork*** • Lines*** <p><i>PARTS ONLY COVERAGE, NO PROGRESSIVE DAMAGE IS COVERED.***</i></p>
--

<p>SUSPENSION</p> <ul style="list-style-type: none"> • 4WD Engagement Actuators • 4WD Manual Locking Hubs • Air Suspension Bag or Springs • Coil Springs • Constant Velocity Joint & Boot • Electronically Controlled Variable Suspension Struts & Switches • Leaf Springs: Shackles & Bushings • Wheel Hub & Wheel Bearings • Steering Knuckles & Spindles • Torsion Bars & Struts <p>SUSPENSION</p> <p>Upper/Lower Control Arm:</p> <ul style="list-style-type: none"> • Ball Joints • Bushings • Links • Shaft(s) <p>Stabilizer Bar:</p> <ul style="list-style-type: none"> • Bushings • Links

<p>STEERING</p> <ul style="list-style-type: none"> • Bearings* • Couplings* • Idler Arm* • Intermediate Shaft Pitman Arm* • Mounting Brackets* • Steering Column Shaft* • Steering Relay Arm* • Tie Rods & Ends* <p><i>COVERED ONLY IF DAMAGED BY A COVERED COMPONENT.*</i></p> <p>STEERING</p> <p>Rack & Pinion:</p> <ul style="list-style-type: none"> • Bearing Kit & Housing, • Electric Steering Assist Motor • Rack Gear • Steering Gear • Steering Gear Linkage Bellows <p>Power Steering Pump</p> <ul style="list-style-type: none"> • Power Cylinder Hose Assembly • Reservoir
--

<p>ELECTRICAL</p> <p>ENGINE</p> <ul style="list-style-type: none"> • Air Intake Temperature Sensor • Air Pressure Sensor Misfire Sensor • Ambient Air Temperature Sensor • Atmosphere/Ambient Pressure Sensor • Camshaft Position Sensor • Camshaft Speed Sensor • Centrifugal Crankcase Oil Separator (CCOSS) Sensor • Compressor Inlet Sensor • Crankshaft Position Sensor • Crankcase Pressure Sensor • Crankshaft Speed Sensor • Cylinder Head Temperature Sensor • ECM Manifold Pressure Sensor • Electronic Engine Controls Humidity Sensor • Engine-Brake Control Pressure Sensor • Engine Oil Pressure Sensor • Engine Oil Temperature Sensor • Engine Position/Timing Sensor • Front Cover Exhaust Temperature Sensor • Intake Manifold Sensor • Intake Manifold Temperature Sensor • Intake Manifold Temperature/Pressure Sensor • Intake Valve Actuator Oil Pressure Sensor • Knock Sensor • Mass Air Flow Sensor • Multiple Functions Temperature Sensor • Oil Breather Centrifuge Speed Sensor • Optimized Idle Sensor • Piston Coolant Sensor • Position Not Specified Multiple Usage Sensor • Shutterstat Temperature Sensor • STC Viscosity Sensor • Swirl Flap Position Sensor • Synchronous Reference Sensor • Temperature Climatic Combustion Control Sensor • Throttle Input Absolute Pressure Sensor • Timing Reference Sensor • Vehicle Speed Sensor • Wideband Oxygen Sensor
--

<p>DIFFERENTIAL(S)</p> <ul style="list-style-type: none"> • Axle Temperature Sensor • Differential Lock Power Switch Sensor • Power Divider Differential Lock Sensor <p>TRANSMISSION</p> <ul style="list-style-type: none"> • Automation Controls Hydraulic Fluid Level Sensor • Automated Transmission Clutch Actuator Sensor • Automated Transmission Countershaft Speed Sensor • Automated Transmission Gear Select Sensor • Automatic Transmission Oil Level Sensor • Automatic Transmission Oil Pump Speed Converter Sensor • Automated Transmission Oil Temperature Sensor • Automatic Transmission Pressure Transducer Sensor • Automatic Transmission Range Sensor • Automated Transmission Rotary (dual) Position Sensor • Automatic Transmission Speed Converter Sensor • Automatic Transmission Speed Sensor • Automatic Transmission Temperature Sensor • Automated Transmission XY Shifter Position Sensor • Input Sensor • Input Shaft Speed Sensor • Line Pressure Sensor • Load Sensor • Main Shaft Speed Sensor • Manual Lever Position Sensor • Oil Heater Sensor • Output Housing Speed Sensor • Output Shaft Speed Sensor • Output Speed Sensor • Overlay Sensor • Rail Select Sensor • Transmission Low Air Pressure Sensor • Transmission Speed Sensor • Turbine Speed Sensor

<p>FUEL</p> <ul style="list-style-type: none"> • Air/Fuel Ratio Sensor • Fuel Pressure Sensor • Fuel Pump Speed Sensor • Fuel Rack Position Sensor • Fuel Tank Fuel Level Sensor • Fuel Tank Pressure Sensor • Fuel Tank Vacuum Sensor • Fuel Temperature Sensor • Fuel/Water Separator Sensor • Gaseous Fuel Leak Detection Sensor • Injection Control Pressure (ICP) Sensor • Rail Pressure Sensor <p>COOLING SYSTEM</p> <ul style="list-style-type: none"> • Coolant Pump Speed Sensor • Charge Air Cooler Air Pressure Sensor • Charge Air Cooler Air Pressure & Temperature Sensor • Circuit-Breaking Thermostat Sensor • Engine Coolant Temperature Sensor • Fan Clutch Thermostat Sensor • Fan Speed Sensor • Low Coolant Sensor • Radiator Fan Temperature Sensor <p>STEERING SUSPENSION BRAKES</p> <ul style="list-style-type: none"> • Driven Wheel Speed Sensor <p>TURBO</p> <ul style="list-style-type: none"> • Boost Pressure Sensor • Pre-Turbo Pressure Sensor • Throttle Plate Position (TPS) Sensor • Turbocharger Boost Sensor • Turbocharger Temperature Sensor • Turbocharger Turbine Speed Sensor • Turbocharger Vane Position Sensor • Turbocharger Wastegate Sensor

<p>MANUAL SWITCHES</p> <ul style="list-style-type: none"> • Air Horn Switch • Air Pressure Gauge Signal Switch • Air Restriction Switch • Differential Lockout Indicator Lamp Switch • Door Jamb Switches • Driver Information Display Mode Switch • Driver Information Display Set Switch • Electric Door Lock Actuators • Engine Coolant Temperature Indicator Switch • Engine Metal Temperature Indicator Switch • Fuel Tank Selector Switch • High Water Temperature Warning Override Switch • Instrument Panel On/Off Pre-Trip Light Switch • Low Fuel Warning Indicator Switch • Low Hydraulic Pressure Signal Switch • Manifold Vacuum Gauge Switch • Multi-Function Stalk Lever Switch • Oil Pressure Switch • Parking Brake Indicator Lamp Switch • Power Seat Motors & Relays • Power Steering Pressure Differential Switch • Power Window Motors & Relays • Propane Cylinder Cradle Latch Indicator Switch • Starter Solenoid Switch • Traction Control Rocker Switch • Traction Control Switch • Windshield Wiper Control Switch • Window Washer Fluid Pumps • Wiper Motor Relay <p>GUAGES</p> <ul style="list-style-type: none"> • Auxiliary Transmission Temperature Gauge • Axle Oil Temperature Gauge • Brake Saver Oil Temperature Gauge • Dash Unit Temperature Gauge • Engine Temperature Gauge • Fuel Gauge • Front/Rear/Steer/Center Drive Axle Oil Temperature Gauge • Instrument Cluster • Oil Temperature Gauge • Outside Air Temperature Gauge • Tachometer • Transmission Temperature Gauge • Voltage Regulator & Gauge • Water Temperature Gauge
--

<p>MODULES</p> <ul style="list-style-type: none"> • Air Ride Suspension ECU Control Module • Antilock Brake System (ABS) Electronic Control Unit • Control Arm Active Suspension Control Module • Cruise Control Assembly • Electronic Ignition Control Module • Fuel Injection Control Modules • Transfer Case Control Module • Transmission Auto Shift Module • Transmission ECU Module • Transmission Gear Module • Transmission Power Interface Module • Shift Selector Module <p>ADDITIONAL ITEMS</p> <ul style="list-style-type: none"> • Collision Avoidance System • Engine distributor • Factory Keyless Entry Transmitter & Receiver • Global Positioning System (GPS) • Heads Up Display (HUD) • Heated Seat Grids • Ignition Coil • Power Mirror Motors • Spark Plug Wires • Wiper Motor <p>Factory-Installed Anti-Theft DEVICES:</p> <ul style="list-style-type: none"> • Cab Alarm • Horn • Relay • Switch • Transmitter <p>Factory-Installed Radio</p> <ul style="list-style-type: none"> • Amplifier • Dash-Mounted CD Player • Tape Player <p>Memory Steering Wheel</p> <ul style="list-style-type: none"> • Activators • Control module • Motors • Sensors • Switches <p>Power Seat</p> <ul style="list-style-type: none"> • Module • Motor • Relay • Switch • Track Assembly

<p>WIRING HARNESS</p> <ul style="list-style-type: none"> • Air Horn Wiring Harness • Distance Sensor Wiring Harness • Security System Wiring Harness • Speedometer Wiring Harness • Trip Odometer Wiring Harness <p>ENGINE</p> <ul style="list-style-type: none"> • Engine Air Temperature Sensor Wiring Harness • Engine Solenoids/Sending Units Wiring Harness • Engine Wiring Harness <p>TRANSMISSION</p> <ul style="list-style-type: none"> • Automatic Transmission • Main Wiring Transmission Harness • Power Shift Control Wiring Harness • Shift Tower Wiring Harness • Speed Sensor Wiring Harness • Transmission Oil Pump Wiring Harness • Transmission Master Wiring Harness • Transmission Range Selector Wiring Harness • Transmission Shift Control Valve Wiring Harness • Transmission Shift Control Wiring Harness • Transmission Wiring Harness <p>DIFFERENTIAL</p> <ul style="list-style-type: none"> • Rear Axle Traction Control Wiring Harness <p>ENGINE ACCESSORY</p> <ul style="list-style-type: none"> • ECU Wiring Harness • Electronic Engine Control Wiring Harness • Electronic Injectors Wiring Harness • Fuel Pump Wiring Harness • Intake Manifold Temperature Sensor Wiring Harness • Tank Fill Level Indicator to Tank Fill Level Gauge Wiring Harness • Throttle Body Wiring Harness <p>AFTERTREATMENT</p> <ul style="list-style-type: none"> • Aftertreatment Control Module to Air Control Unit Wiring Harness • Aftertreatment Control Module to Metering Device Wiring Harness • Aftertreatment Control Module to Pump Wiring Harness • Aftertreatment Control Module to Tank Fill Level Indicator Wiring Harness • Aftertreatment Control Module to Tank Heater Solenoid Valve Wiring Harness • Aftertreatment Module to Sensors Wiring Harness • Ambient Air Temperature Sensor Wiring Harness • DEF System Wiring Harness • DEF Tank Level Sensor Jumper Harness • DEF Tank Pump Wiring Harness • Diesel Particulate Filter (DPF) Jumper Harness • ECM Harness • EGR Pressure Sensor Wiring Harness • EGR Valve Wiring Harness • Exhaust Aftertreatment Device Wiring Harness • Exhaust Gas Temperature Sensor Wiring Harness

APU

- Cam Followers
- Camshaft & Cam Bearings
- Connecting Rods
- Connecting Rod Bearings
- Crankshaft
- *Cylinder Head
- *Engine Block
- Hydraulic Lifters

**COVERED ONLY IF DAMAGED BY A COVERED COMPONENT; NO PROGRESSIVE DAMAGE*

- Intake & Exhaust Valves/Guides
- Main Bearings
- Oil Pan
- Oil Pump & Housing
- Oil Pump Pick Up Tube & Screen
- Oil Pump Pressure Relief Springs & Valves
- Pistons
- Pistons Rings
- Piston Oil Cooling Jets
- Push Rods

- Rocker Arm Shafts
- Rocker Arms
- Thrust Washers
- Timing Chain & Gears
- Timing Chain Tensioners
- Timing Gear Cover
- Valve Cover
- Valve Keepers (locks)
- Valve Retainers
- Valve Springs
- Wrist Pins

RELATED COMPONENTS

- Exhaust Manifold
- Fuel Injection Pump
- Fuel Pump
- Injectors
- Water Pump**

*NO PROGRESSIVE DAMAGE***

HYDRAULICS

LIFTGATE

- Hydraulic Cylinders
- Hydraulic Pump Motor
- Liftgate Power Unit
- Liftgate Solenoid**
- 2-way Drain Valve

*NO PROGRESSIVE DAMAGE***

BOOM

- Control Valves
- Hydraulic Cylinders
- Hydraulic Pump
- Outtrigger Valves

HOOK LIFT/HOIST

- Hydraulic Valves
- JIB System Hydraulic Cylinder
- Piston and/or Gear Pump
- Single and/or Dual Lift/Dump Cylinder(s)

TURNTABLE

- Gearbox
- Hydraulic Controls
- Hydraulic Cylinder(s)
- Hydraulic Dump(s)
- Hydraulic Turntable Bearings
- Hydraulic Valves

DUMPBED ROLL OFF DUMP

- Hydraulic Controls
- Hydraulic Pump
- Hydraulic Tilt/Lift Cylinder(s)
- Roll Off Cable System*

*THE CABLE IS NOT COVERED**

PLOW

- Hydraulic Cylinder(s)
- Hydraulic Pump
- Hydraulic Valve(s)
- Hydraulic Reservoir**

*NO PROGRESSIVE DAMAGE***

TOWING

- Hydraulic Winch
- Lift & Bed Tilt Hydraulics
- Wheel Lift & Boom Hydraulics

CEMENT MIXER

- Hydraulic Gear Pump
- Hydraulic Piggyback, Chute, Lock, Latch, Swing, Hopper, Booster, and Axle Cylinders.

TRASHTRUCK

- Control Levers
- Hydraulic Pump

Hydraulic Cylinders

- Container Grabber/Clamp, Tilt/dump and Arm/lift/Reach
- Inside and Outside Packer/Blade/Ejector/Push-Out/Sweep
- Body Raise/Dump
- Door Hopper Cover
- Tailgate Raise
- Holding Crusher Panel

ADDITIONAL ITEM

- Hydraulic Vehicle Stabilizers (Outriggers)

TOTAL360™
COVERED COMPONENTS

